



VP900SL23-5S Microwave Oven Exploded Drawing (39)

WP900SL23-5S Part And Components List

Art.	Name	Count	Art.	Name	Count	Art.	Name
P01	door	1	C01	h.v. fuse	1	B01	upper foam cushion
P02	door window	1	C02	h.v. diode	1	B02	turntable cushion
P03	fuse socket	1	C03	h.v. capacitor	1	B03	plastic bag
P04	capacitor holder	1	C04	wave filter	1	B04	manual
P05	fan shroud	1	C05	fan motor	1	B05	protection film
P06	fan blade	1	C06	lamp	1	B06	plastic bag
P07	door frame	1	C07	thermostat(1)	1	B07	lower cushion
P08	choke cover	1	C08	magnetron	1	B08	carton
P09	washer	1	C09	microswitch	1		
P10	shaft	1	C10	microswitch	1		
P11	roller ring	1	C11	microswitch	1		
P12	glass tray	1	C12	transformer	1		
P13	splash shield	1	C13	wiring harness	1		
P14	upper hinge	1	C14	power cord	1		
P16	cavity	1	C15	turntable motor	1		
P17	label	1	C17	timer	1		
P18	outer enclosure	1	C19	thermostat(2)	1		
P19	heater holder	1					
P20	power cord holder	1					
P21	lamp socket	1					
P22	air duct	1					
P23	microswitch mounting	1					
P24	shockproof rubber	1					
P26	foot	4					
P27	base plate	1					
P28	lower hinge	1					
P29	keyboard	1					
P30	keyboard shell	1					
P39	knob	2					
P40	handle	1					
P41	door shell	1					